


LOBO AirGuns

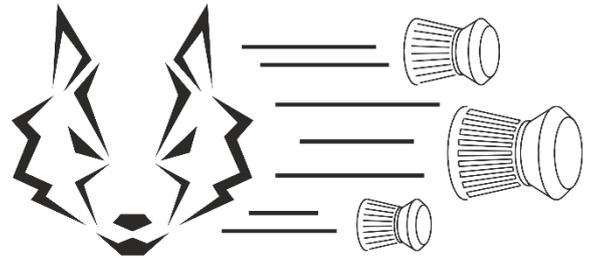

AZOR[®] v2

PCP air rifle

User and safety manual



INDEX

1. SAFETY WARNINGS
2. WARRANTY
3. SAFETY LOCK
4. AMMUNITION LOAD
5. ARMING THE AIR RIFLE
6. REMOVE THE STOCK
7. POWER ADJUSTMENT
8. AIR LOAD
9. BARREL REMOVE
10. AIR TANK REMOVE
11. TRIGGER ADJUSTMENT
12. MAGAZINE ADJUSTMENT
13. SPECIFICATIONS
14. DRAWINGS AND PARTS LISTING

1. WARNINGS

1.1. LEGISLATION AND SAFETY

OWNERS ARE RESPONSIBLE TO FOLLOW AND RESPECT ALL LAWS RELATED TO THE OWNERSHIP AND UTILIZATION OF THIS WEAPON.

YOU SHOULD NOT SHOW OR EXHIBIT THIS AIR RIFLE IN PUBLIC PLACES, AS IT MAY BE MISTAKEN WITH A FIREGUN.

1.2. USE

ALWAYS HANDLE AIR RIFLE AS IT WERE LOADED AND NEVER LEAVE IT UNATTENDED. EVEN IF UNLOADED, NEVER AIM ANYONE OR LET ANYONE AIM NOBODY WITH IT.

NEVER USE OR HANDLE AN AIR RIFLE UNDER THE INFLUENCE OF ALCOHOL, DRUGS OR MEDICINES.

1.3. STORAGE

KEEP YOUR AIR RIFLE UNLOADED IN A SAFE PLACE OUT OF THE REACH OF CHILDREN.

KEEP AMMUNITION AND AIR RIFLE IN DIFFERENT PLACES, BETTER UNDER KEY

1.4. CARRYING

WHEN CARRYING A AIR RIFLE, CARRY UNLOADED AND SAFETY LOCKED. IN CASE OF FALLING OR HARD KNOCK THE AIR RIFLE CAN BE FIRED ACCIDENTALLY, EVEN SAFETY LOCKED

1.5. BEFORE SHOOTING

ALWAYS WEAR PROTECTION EQUIPMENT FOR YOUR EYES AND EARS WHILE USING THIS AIR RIFLE.

EXTEND THIS RECOMMENDATION TO NEARBY PEOPLE.
IGNORING THESE INSTRUCTIONS MAY CAUSE SERIOUS INJURY

KEEP YOUR AIR RIFLE UNLOADED UNTIL YOU ARE READY TO SHOOT.

BEFORE SHOOTING, EVALUATE A VERY RISK THAT COULD CAUSE NOT TO TAKE SHOT AND DO NOT SHOOT
IF YOU ARE NOT COMPLETELY SURE OF WHAT IS BEHIND THE TARGET

ALWAYS KEEP A SAFETY DISTANCE BETWEEN YOU AND TARGET WHEN SHOOTING.

WE RECOMMEND YOU TO USE A TARGET HOLDER AND A PELLET CATCHER

SELECT TARGETS THAT DO NOT IMPLY OR INVOLVE ANY DANGER. IT HAS TO BE CONSIDERED THAT SOME
TARGETS CAN MAKE THE PELLET BOUNCE, LIKE WATER SURFACE.

1.6. HANDLING

THIS AIR RIFLE MUST ONLY BE CHARGED WITH COMPRESSED AIR. NO OTHER GASES (IE: OXYGEN COULD
RESULT IN FIRE OR EXPLOSION) CAN BE USED.

DO NOT ATTEMPT TO DISASSEMBLE OR HANDLE YOUR AIR RIFLE. THE INTERIOR MECHANISM ARE
COMPOSED OF PARTS WHICH INCLUDING TENSIONED SPRINGS AND HIGH PRESSURE COMPRESSED AIR
CYLINDERS THAT MAY CAUSE SERIOUS INJURY.

DO NOT MAKE MODIFICATIONS OF ANY KIND IN THIS AIR RIFLE IN ORDER TO ASSEMBLE A FIREGUN. ITS
VERY DANGEROUS AND COULD BE CONSTITUTIVE OF CRIME. THE OWNER/USER WILL BE LIABLE FOR ANY
DAMAGES WHICH COULD ORIGINATE A WRONG USE OR HANDLING OF THIS AIR RIFLE. IN ANY CASE THIS
SHALL BE LIABILITY OF THE MANUFACTURER/DISTRIBUTOR.

2. WARRANTY

THIS PRODUCT IS WARRANTED TO THE RETAIL CONSUMER FOR 2 YEARS FROM DATE OF RETAIL PURCHASE
AGAINST DEFECTS IN MATERIAL AND WORKMANSHIP AND IS TRANSFERABLE. THE ORIGINAL SALES
RECEIPT MUST BE KEPT AS RECORD OF DATE OF PURCHASE.

IS COVERED:

- REPLACEMENT PARTS AND LABOR.
- TRANSPORTATION CHARGES TO CONSUMER FOR REPAIRED PRODUCT.



IS NOT COVERED:

- TRANSPORTATION CHARGES TO AUTHORIZED SERVICE STATION FOR DEFECTIVE PRODUCT.
- DAMAGES CAUSED BY ABUSE, MODIFICATION OR FAILURE TO PERFORM NORMAL MAINTENANCE.
- CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, OR INCIDENTAL EXPENSES INCLUDING DAMAGE TO PROPERTY. SOME LOCAL, STATE OR FEDERAL LAWS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.
- ANY OTHER EXPENSES


3. SAFETY LOCK

The Lobo Airguns® AZOR air rifle is equipped with a safety lock lever located next to the charging bolt.

With the lever in the backward position we will have the trigger locked. In order to fire, the lever must be moved forward.

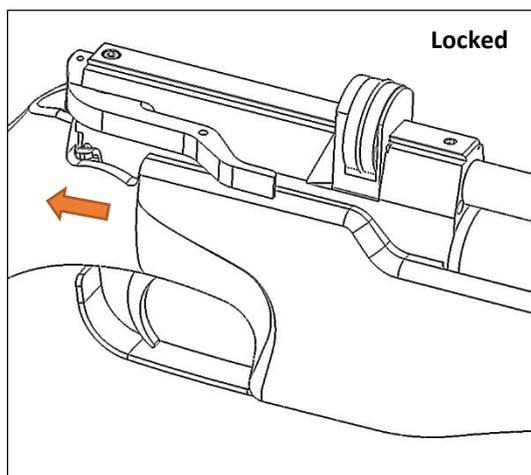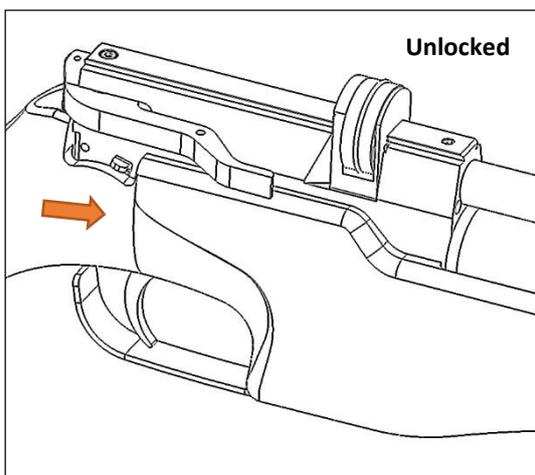

4. MAGAZINE LOADING

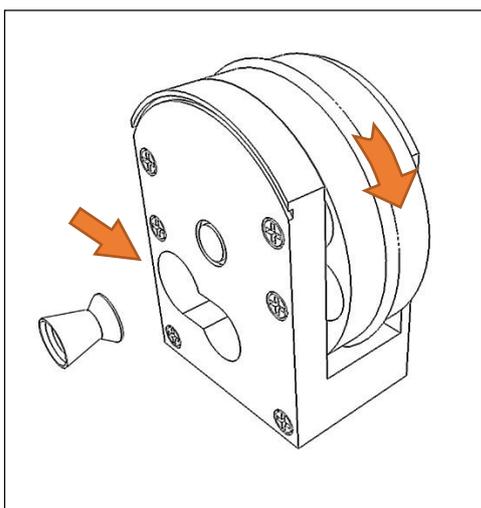

The AZOR AIR RIFLE is designed to use multi-shot magazines. To load the pellets, first we have to extract the magazine drum from the carbine.

With an empty magazine, insert the first pellet as shown in the image and rotate the drum counterclockwise. Repeat those steps until the magazine is full.

Magazine capacity depends on the caliber:


- 13 pellets - Cal. 0.17 / \varnothing 4.5
- 11 pellets - Cal. 0.22 / \varnothing 5.5
- 9 pellets - Cal. 0.25 / \varnothing 6.35

5. LOADING

This operation must be done with the safety locked.

Once we have a fully loaded magazine, we will move the charging bolt backwards and turn it clockwise the end point. Then insert the magazine from the left side.


Next, we move the bolt forward and the first pellet will be ready to be fired.

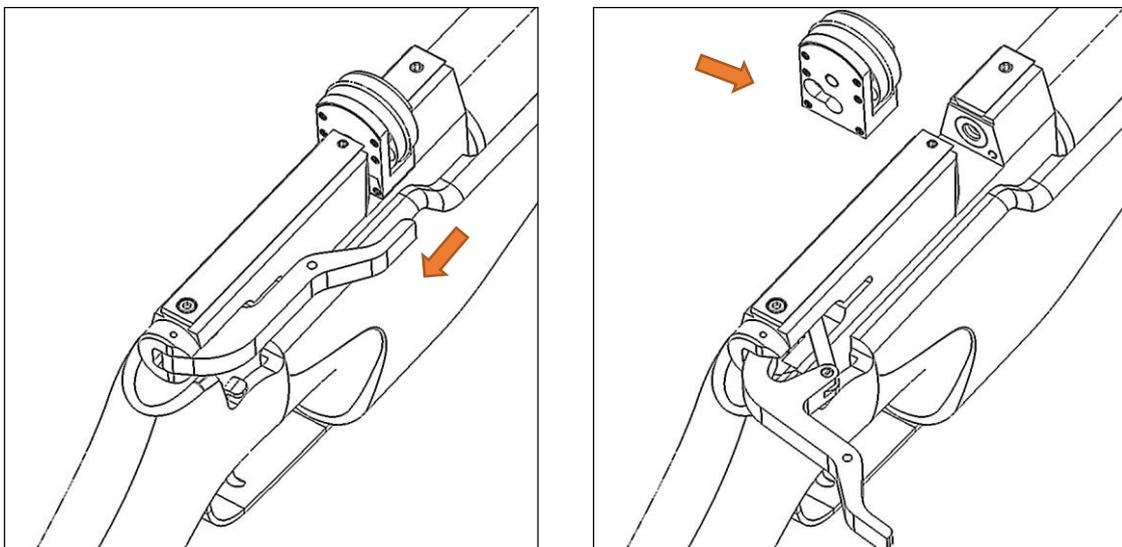

6. REMOVE THE STOCK

To perform some maintenance or adjustment operations, it may be necessary to remove the wood stock. To do this, only 2 screws have to be removed.

There is a first bolt which secures the head to the barrel band. The second screw is located next to the trigger guard, and fixes the stock to the rifle body.

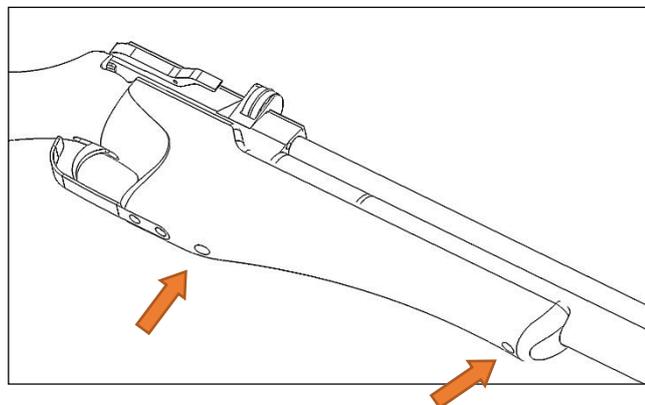


7. POWER ADJUSTMENT

To adjust the power adjustment we must take away the stock and slightly release the “A” screw using a 3mm. Allen wrench (Hex key)

The hammer adjustment is done by of the screw “B” using a 2.5 Allen wrench. By tightening this screw, the inner spring is compressed increasing the firing power.

Once the power is finally adjusted we will tighten the screw “A” to lock the hammer adjustment.

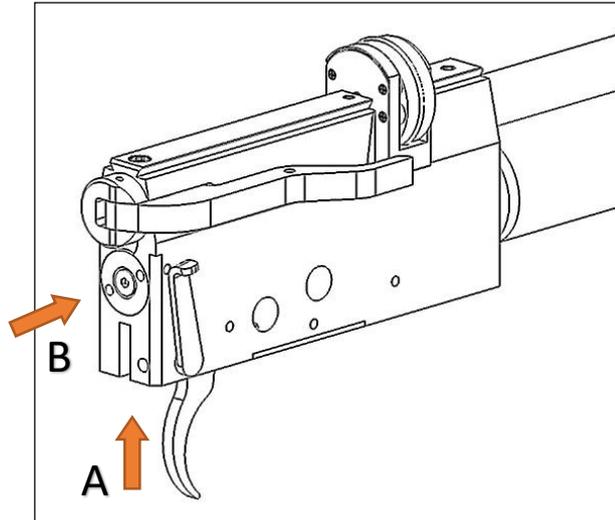


8. AIR FILLING

At the end of the air tank, there is a port to fill it with compressed air, just behind the pressure gauge.

The filling port is accessible by turning the pressure gauge protection cap.

LOBO Airguns® provides a quick fill nozzle for use with a filling hose.

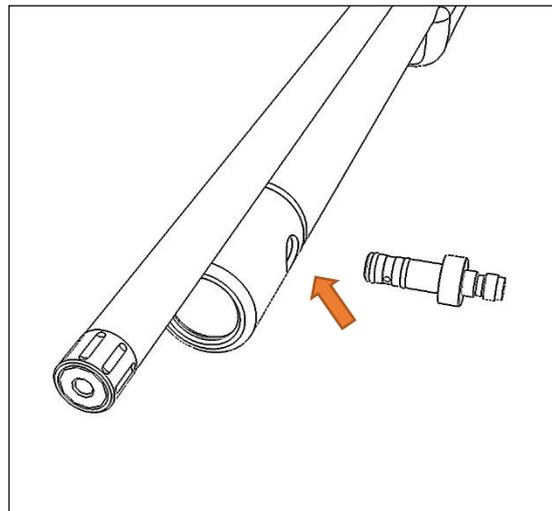


VERY IMPORTANT:

WHEN USING BOTTLES OR AIR COMPRESSORS FOR FILLING THE AIR TANK, THIS SHOULD BE DONE SLOWLY AND GRADUALLY TO AVOID AN ABRUPT TENSION BETWEEN INTERNAL COMPONENTS.

To perform any part replacement or maintenance operation the air tank must be completely drain.

We have installed a drain valve that we will open very slowly to let the air out of the interior of the tank.


To get access to this screw, please remove the pressure gauge cap and use a 2mm Allen wrench.

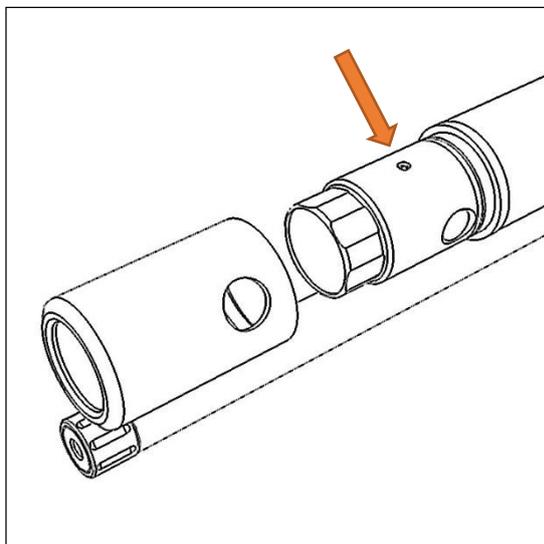

IMPORTANT:

MAKE SURE THAT THE DEAIN VALVE IS FULLY CLOSED, OTHERWISE THE DEPOSIT CAN NOT BE FILLED

9. REMOVING THE BARREL

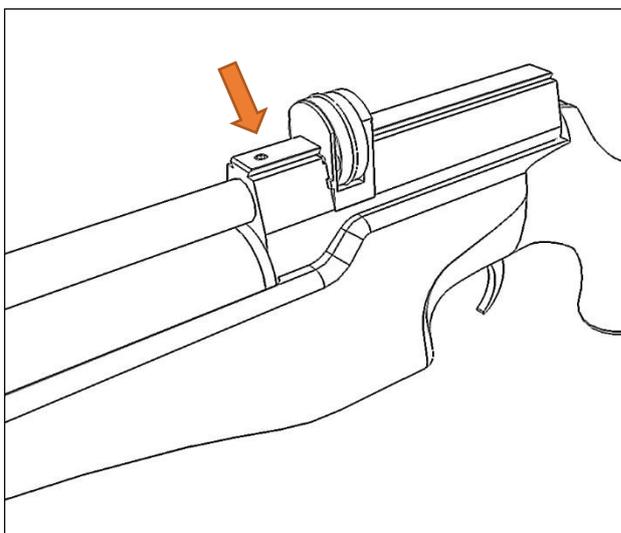

It may be necessary to remove the barrel to clean it or to replace a joint.

The screw at the top at the beginning of the barrel must be removed. Once removed, we can take off the barrel by pulling it out.


All barrels supplied by LOBO Airguns® are manufactured to the highest standards of quality and precision.

IMPORTANT

YOU CAN FIND A COMPLETE LIST OF SPARE PARTS AND INGS NEEDED AT THE END OF THIS DOCUMENT.

10. AIR TANK REMOVE

Once the stock is removed, we can also take apart the air tank for its replacement or maintenance. We will use a 2.5mm. Allen key to remove the stud (A) that fixes the barrel band to the tank. Finally, we use a 4mm allen key. to remove the last stud (B) and release the tank away from the rifle body.

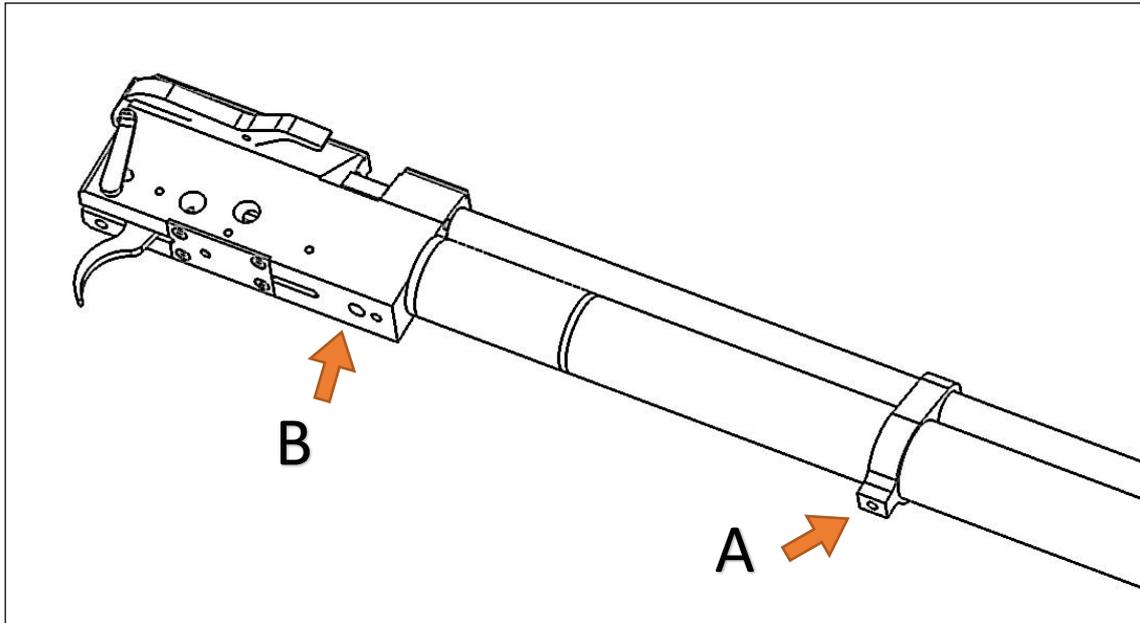


11. TRIGGER ADJUSTMENT

The two stage adjustment for the trigger is done by adjusting the **A** and **B** screws. We must remove the stock in order to do this operation.

With the screw **A** we set the first stage and with the second screw **B** the trigger sensitivity. Only a 1,5mm Allen wrench is needed.


When maintenance, be aware that the trigger mechanism springs are not the same size and are not interchangeable with each other.

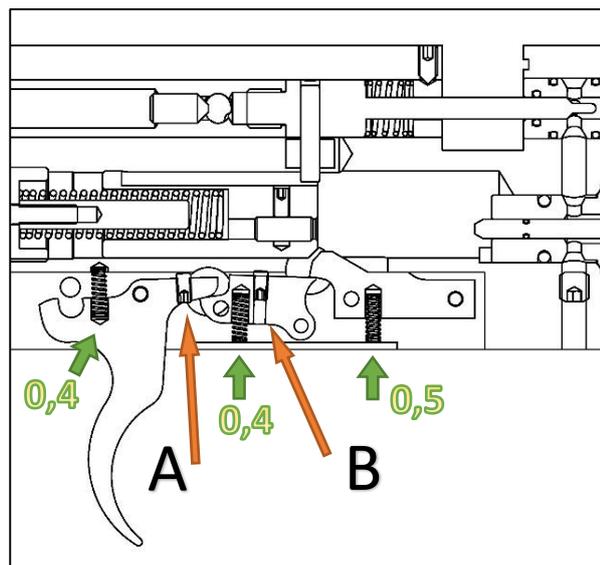

VERY IMPORTANT

ALL LOBO AIRGUNS AIR RIFLES ARE SOLD WITH FACTORY ADJUSTED. APPLYING WRONG SETTINGS MAY CAUSE AN INVOLUNTARY FIRING OF THE AIR RIFLE

12. MAGAZINE DRUM FITING SETTING

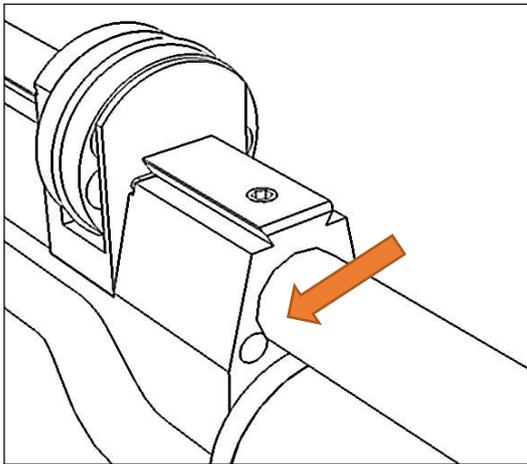

The drum magazine fits into the air rifle housing through a groove and is locked in position by a screw with built-in spring that holds the drum in position.

Therefore, this screw must be adjusted so the drum is securely tightened.

The screw head requires a flat-blade screwdriver. To apply this setting more comfortable we recommended to remove both the barrel and the tank

An incorrect adjustment can damage the magazine housing after a long use.

13. TECHNICAL DATA

MODEL	AZOR
CALIBER	.177 (Ø4,5) - .22 (Ø5,5) - .25 (Ø6,35)
BARREL LENGTH	600mm.
BARREL THREAD FOR ACCESSORIES	1/2 UNF
MAGAZINE DRUM	MULTI-SHOT 13 PELLETS (CAL Ø4.5), 11 PELLETS (CAL Ø5.5) AND 9 PELLETS (CAL Ø6.35)
MAX. SHOOTING POWER	ACCORDING TO CURRENT REGULATION BY COUNTRY
TANK CAPACITY	250 cc
MAX. PRESSURE LOAD	250 bar
PRESSURE REGULATOR	INCLUDED
TRIGGER	TWO STAGE
SAFETY LOCK	LEVER ON THE RIGHT SIDE, NEXT TO TRIGGER
STOCK	WOOD
DIMENSIONS	1062 x 185 x 52mm.
WEIGHT	3,2Kg.
SCOPE RAIL/MOUNT	11mm.


14. DRAWINGS AND PARTS LIST

14.1 STOCK ASSEMBLY

14.2 RIFLE ASSEMBLY

**THE CONTENT OF THIS MANUAL, ASSEMBLY PLANS,
EXPLODE AND ADJUSTMENT DRAWINGS ARE
AVAILABLE FOR DOWNLOADING IN OUR WEB**

<https://www.loboairguns.com>

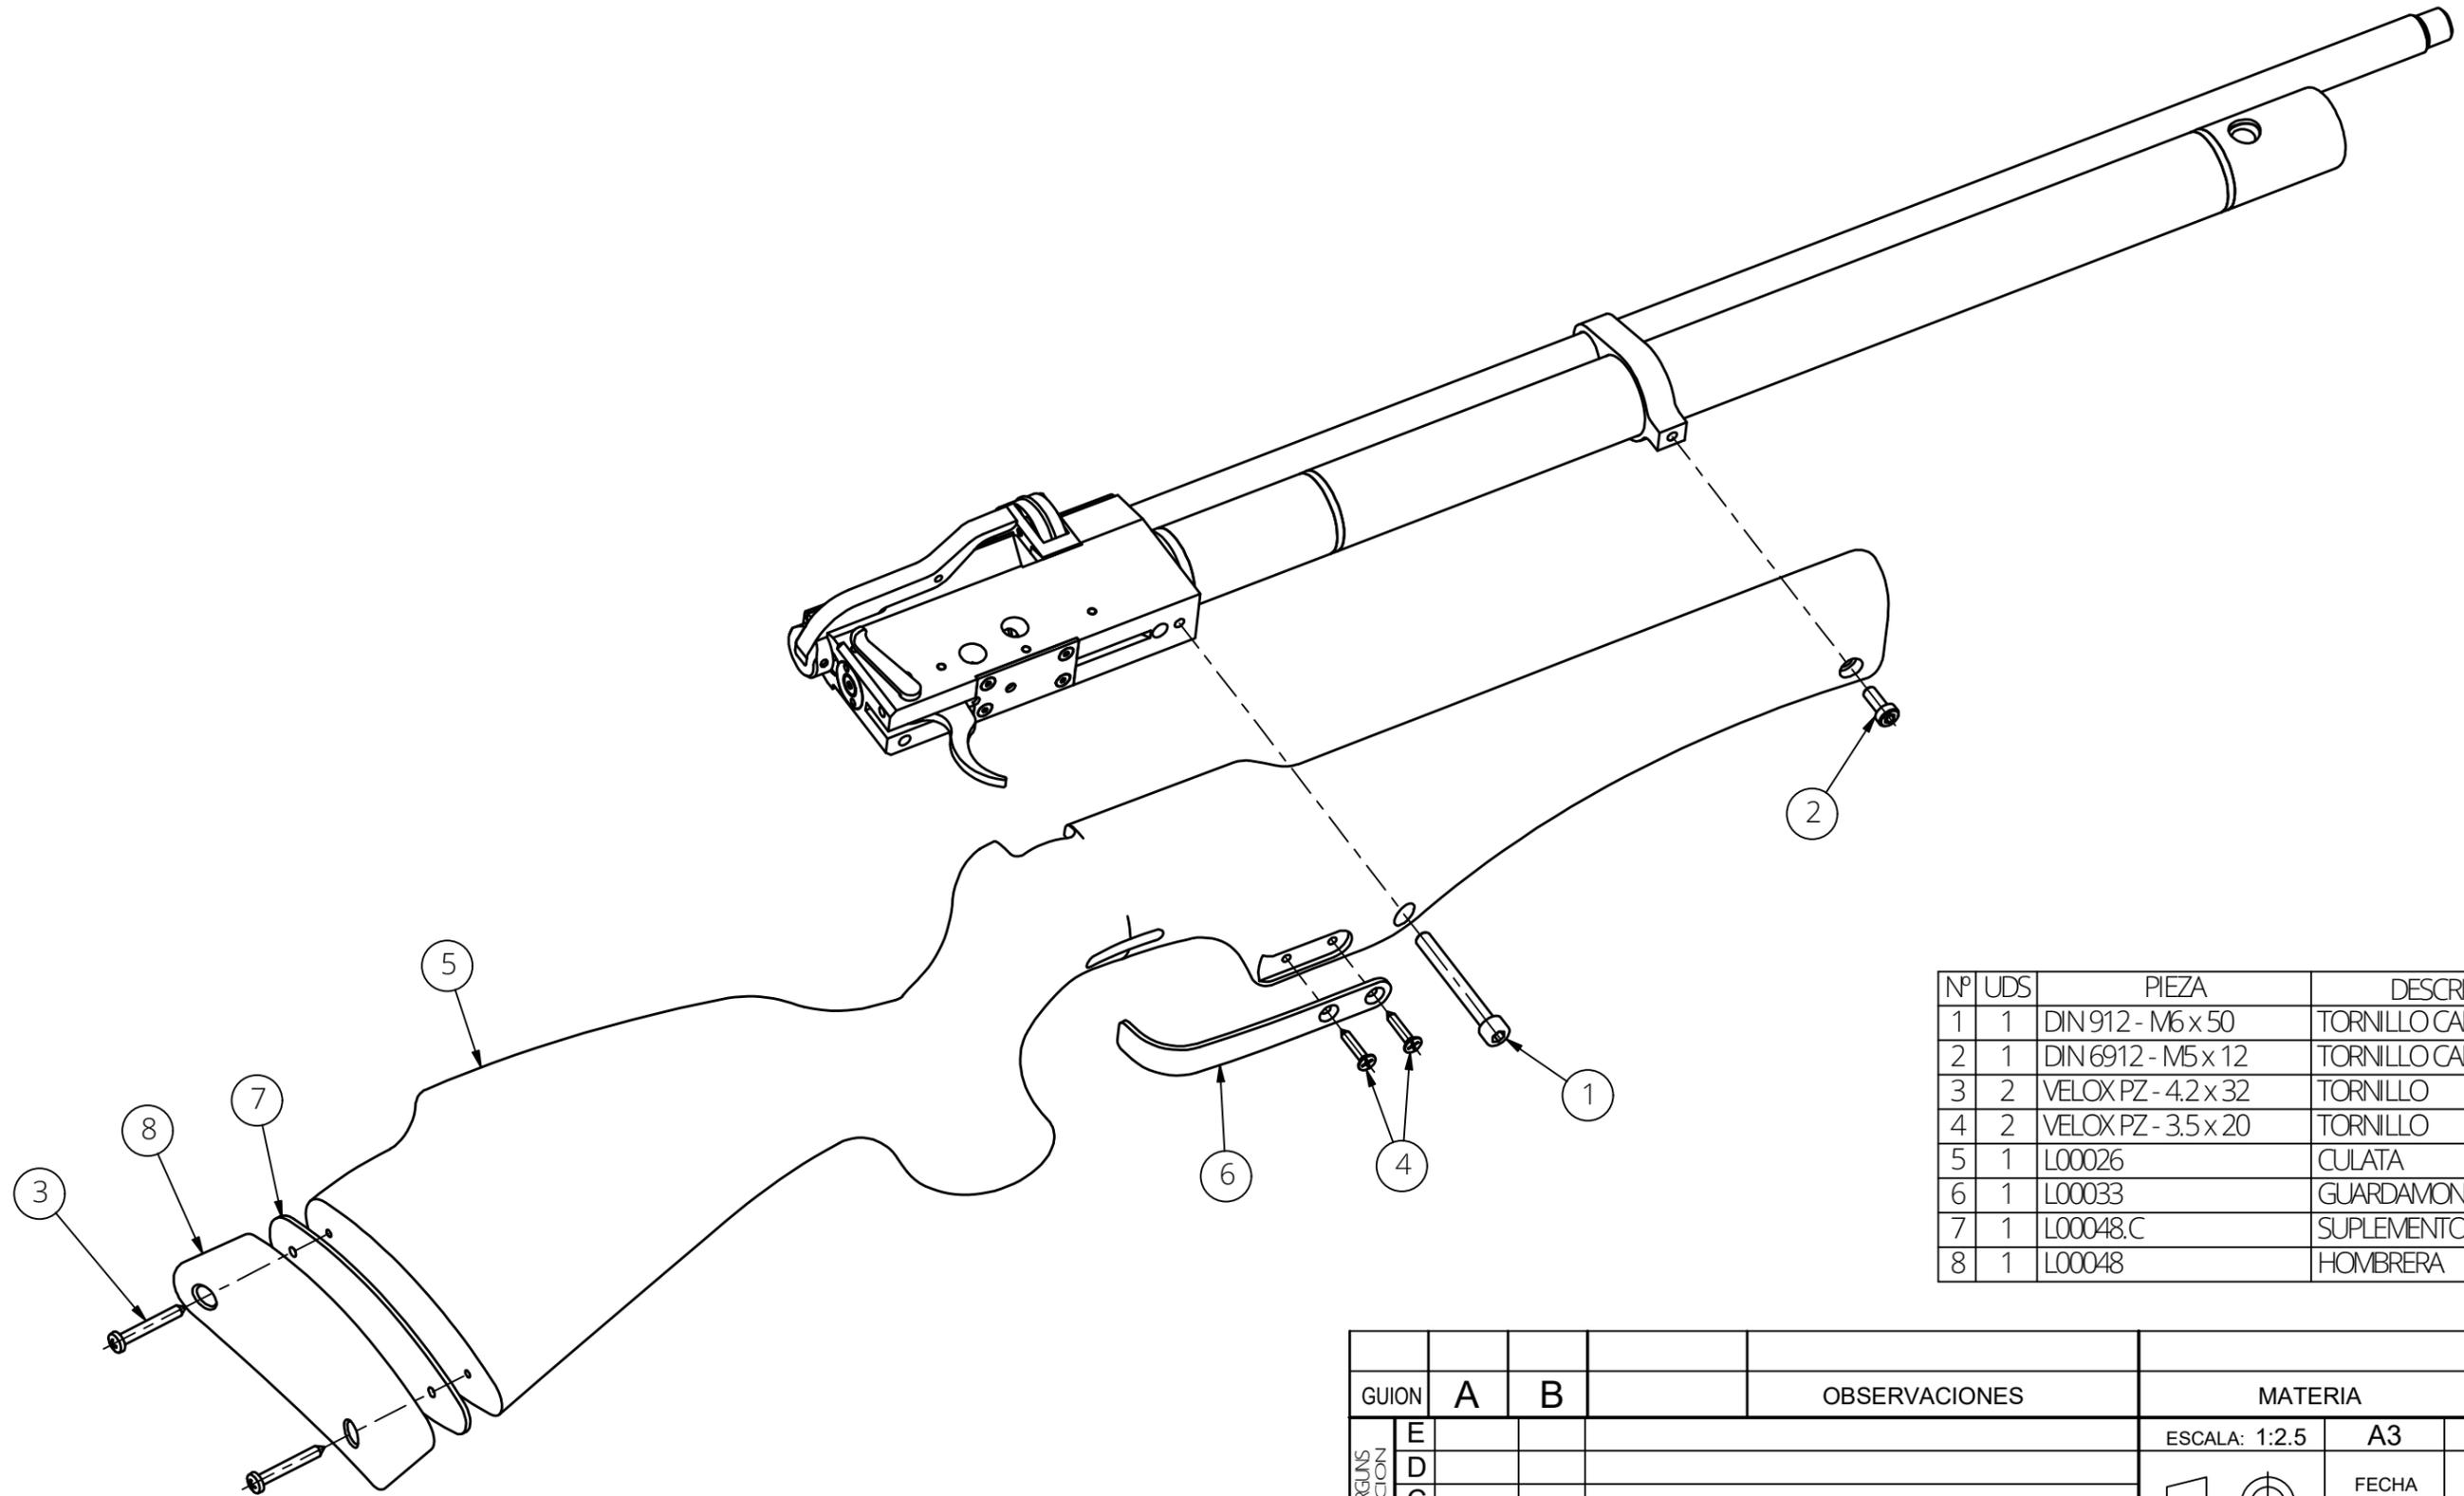


Nº	UDS	PIEZA	DESCRIPCIÓN
1	1	DIN 912 - M6 x 50	TORNILLO CABEZA ALLEN
2	1	DIN 6912 - M5 x 12	TORNILLO CABEZA ALLEN
3	2	VELOX PZ - 4.2 x 32	TORNILLO
4	2	VELOX PZ - 3.5 x 20	TORNILLO
5	1	L00026	CULATA
6	1	L00033	GUARDAMONTES
7	1	L00048.C	SUPLEMENTO
8	1	L00048	HOMBRERA

GUION	A	B	OBSERVACIONES	MATERIA	LONG. CORTE	P. BRUTO KG.
E				ESCALA: 1:2.5	A3	DIBUJADO
D					FECHA	15/09/2016
C					POR	J.M.A.
B						
A						
IND	FECHA	POR	MODIFICACION	STOCK ASSEMBLY		
	L00001 V2		CARABINA AZOR			

PROPIEDAD EXCLUSIVA DE LOBO AIRGUNS
 PROHIBIDA SU REPRODUCCION



ASSEMBLY SEQUENCE:

IN FIRST PLACE INSTALL THE CAP (5-12) THEN, IN THIS ORDER, THE SPRING (29),
THE NEEDLE GROUP (24-13-7-11-22-25-8-23-2)
AND FINALLY THE HAMMER GROUP (16-28-14)

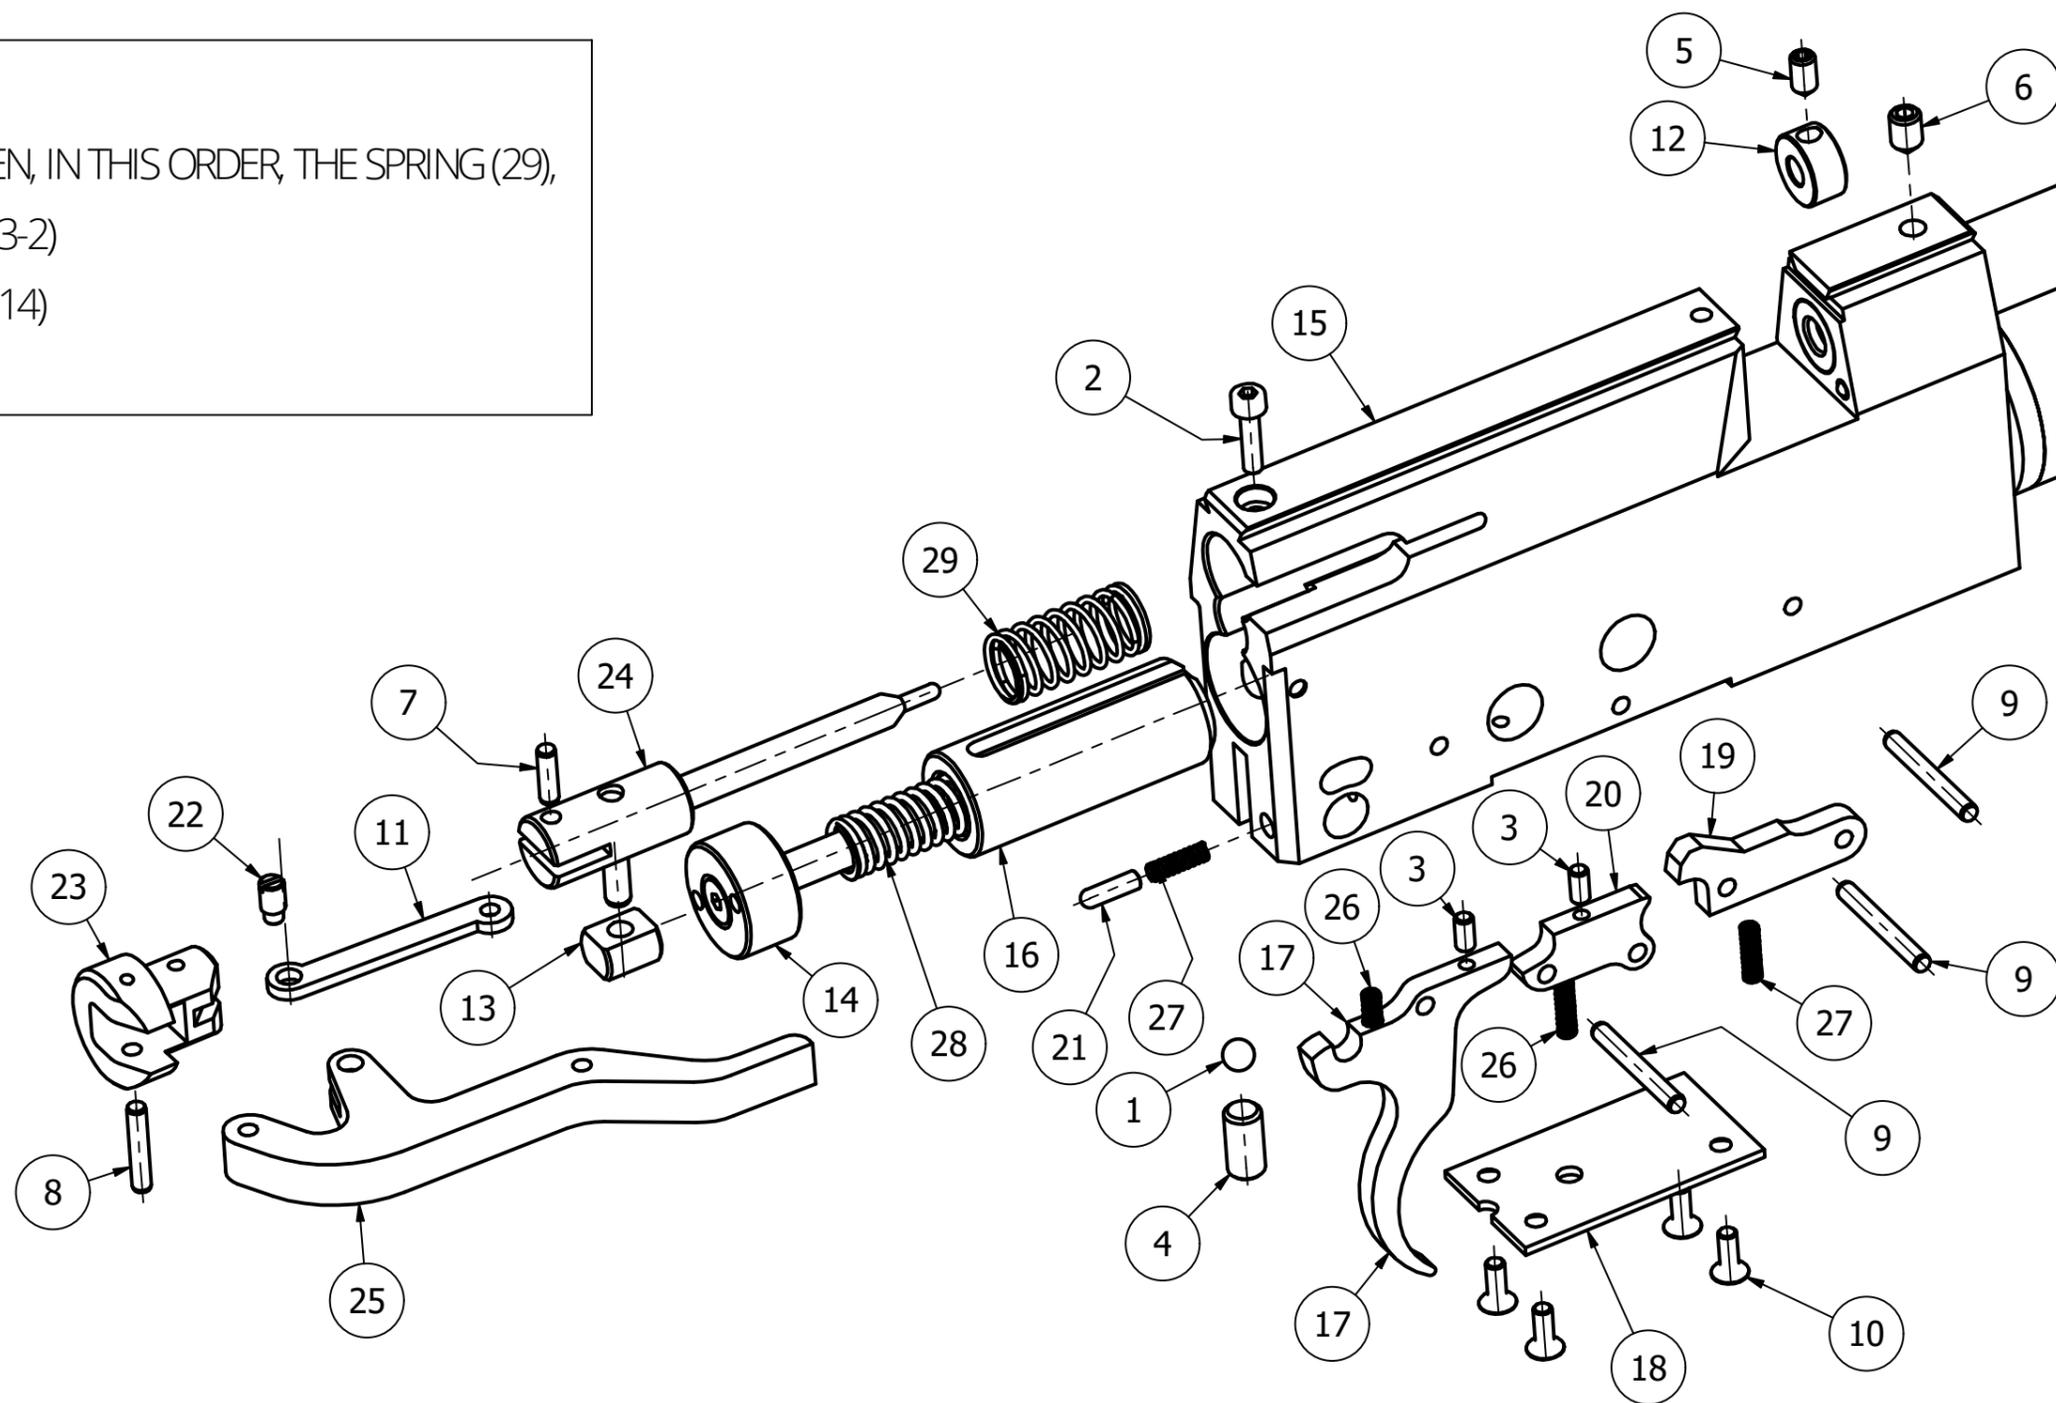

NP	UDS	PIEZA	DESCRIPCION
1	1	BOLA Ø5	
2	1	DIN 912 - M3 x 12	TORNILLO CABEZA ALLEN
3	2	DIN 913 - M3 x 6	ESPARRAGO ROSCADO
4	1	DIN 913 - M6 x 12	ESPARRAGO ROSCADO
5	1	DIN 914 - M4 x 8	ESPARRAGO ROSCADO
6	1	DIN 914 - M5 x 8	ESPARRAGO ROSCADO
7	1	DIN 6325 Ø3 x 10	PASADOR CLINDRICO
8	1	DIN 6325 Ø3 x 16	PASADOR CLINDRICO
9	3	DIN 6325 Ø3 x 24	PASADOR CLINDRICO
10	4	DIN 7991 - M3x8	TORNILLO AVELLANADO
11	1	L00029	BIELA CARGA
12	1	L00035.45 (0.17") L00035.55 (0.22") L00035.635 (0.25")	CASQUILLO TOPE
13	1	L00036	GUIA CERROJO
14	1	L00037	TAPÓN
15	1	L00040	CUERPO CARABINA
16	1	L00041	MARTILLO
17	1	L00042	GATILLO
18	1	L00043	TAPA REGISTRO
19	1	L00046	LIBERADOR
20	1	L00047	GATILLO INTERMEDIO
21	1	L00049	POSICIONADOR PALANCA SEGURO
22	1	L00055	PASADOR ROSCADO
23	1	L00061	BULON EJE PALANCA DE CARGA
24	1	L00065.45 (0.17") L00065.55 (0.22") L00065.635 (0.25")	AGUJA DE CARGA
25	1	L00066	PALANCA DE CARGA
26	2	RC-3-14-1-0.4	RESORTE GATILLO/ ENLACE GATILLO
27	2	RC-3-14-1-0.5	RESORTE LIBERADOR MARTILLO
28	1	RC-10-66-4-1.25	RESORTE MARTILLO
29	1	RC-11.5-24-3-1	RESORTE RETORNO ACUJA DE CARGA

00		A	B	C	D	OBSERVACIONES										Material	Corte mm	Peso kg		
PROPIEDAD EXCLUSIVA DE MECANICAS PALAMOS 95 S.L. PROHIBIDA SU REPRODUCCION	Guión					>0,5	>6	>30	>120	>315	>1000	>2000	>4000	>8000		Tratamiento				
	Diferencias admisibles norma DIN 7168			±0,1	±0,2	±0,3	±0,5	±0,8	±1,2	±2	±3	±4			Fecha	03/09/2019				
	Fecha	Por	Modificación																Dibujado	Oficina técnica
			L00001																1:1	A3
CARABINA AZOR v2																	 LOBO AirGuns® www.loboairguns.com info@loboairguns.com			
AIR RIFLE ASSEMBLY 1/3															L00001					

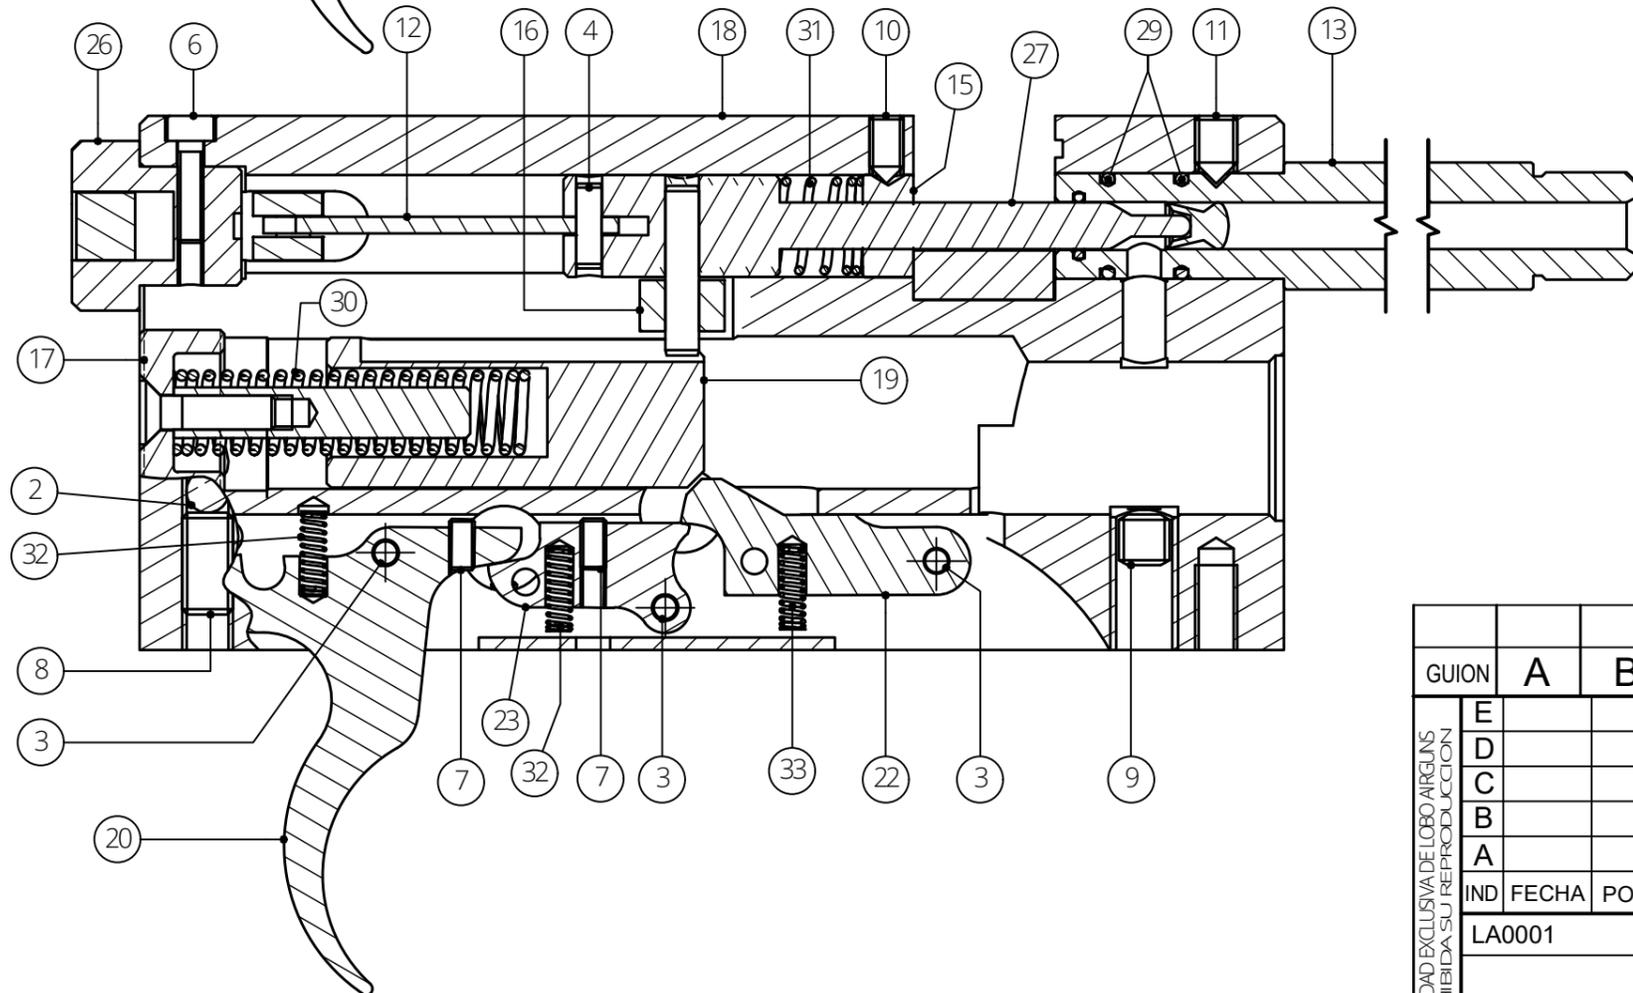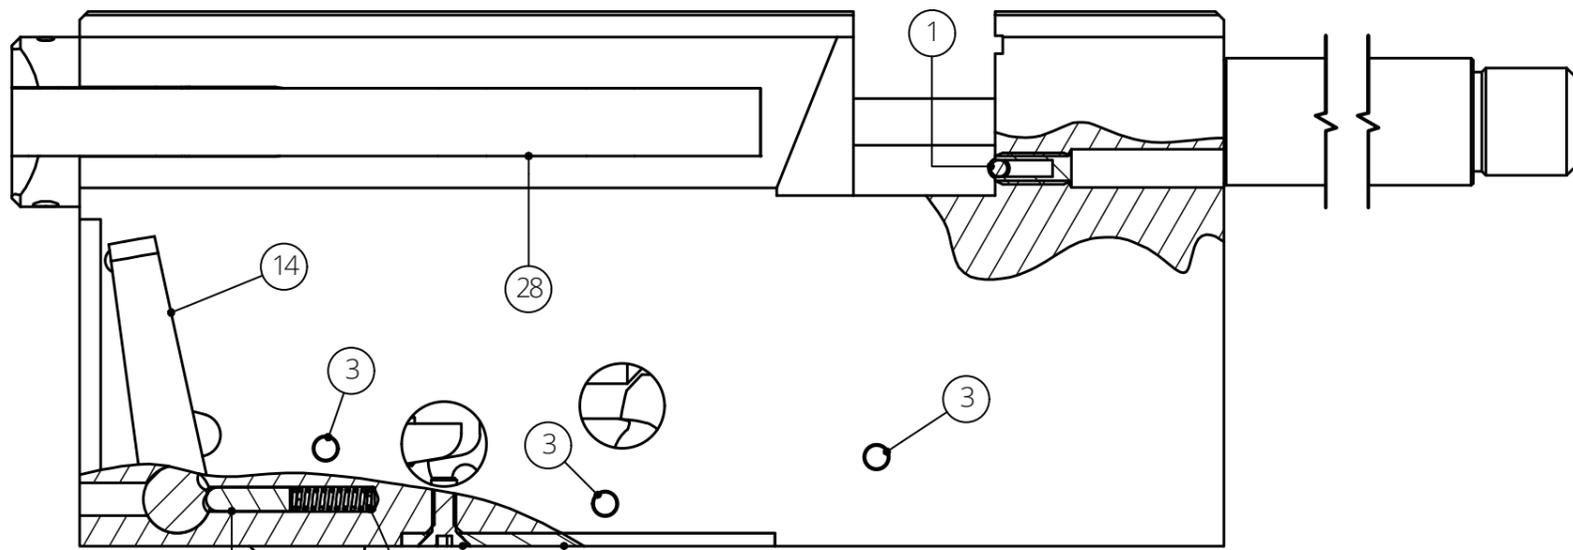


Nº	UDS	PIEZA	DESCRIPCION
1	1	22050.0004	POSICIONADOR HALDER M4
2	1	BOLA DELRIN	Ø5
3	3	DIN 6325 - 3x24	PASADOR CILINDRICO
4	1	DIN 6325 Ø3x10	PASADOR CILINDRICO
5	4	DIN 7991 - M3x8	TORNILLO AVELLANADO ALLEN
6	1	DIN 912 - M3x12	TORNILLO CABEZA ALLEN
7	2	DIN 913 - M3x6	ESPARRAGO ALLEN
8	1	DIN 913 - M6x12	ESPARRAGO ALLEN
9	1	DIN 913 - M6x6	ESPARRAGO ALLEN
10	1	DIN 914 - M4x8	ESPARRAGO ALLEN
11	1	DIN 914 - M5x8	ESPARRAGO ALLEN
12	1	L00029	BIELA CARGA
13	1	L00031.45 (0.17") L00031.55 (0.22") L00031.635 (0.25")	MECANIZADO CAÑON
14	1	L00032	PALANCA SEGURO
15	1	L00035.45 (0.17") L00035.55 (0.22") L00035.635 (0.25")	CASQUILLO TOPE
16	1	L00036	GUIA CERROJO
17	1	L00037	TAPON
18	1	L00040	CUERPO CARABINA
19	1	L00041	MARTILLO
20	1	L00042	GATILLO
21	1	L00043	TAPA REGISTRO
22	1	L00046	LIBERADOR
23	1	L00047	GATILLO INTERMEDIO
24	1	L00049	POSICIONADOR PALANCA SEGURO
25	1	L00055	PASADOR ROSCADO
26	1	L00061	BULON EJE PALANCA DE CARGA
27	1	L00065.45 (0.17") L00065.55 (0.22") L00065.635 (0.25")	AGUJA DE CARGA
28	1	L00066	PALANCA DE CARGA
29	2	OR Ø9.5x1.5	JUNTA TORICA
30	1	RC-10-66-4-1.25	RESORTE MARTILLO
31	1	RC-11.5-24-3-1	RESORTE PALANCA DE CARGA
32	2	RC-3-14-1-0.4	RESORTE GATILLO / ENLACE
33	2	RC-3-14-1-0.5	RESORTE LIBERADOR MARTILLO

GUION	A	B	OBSERVACIONES	MATERIA	LONG. CORTE	P. BRUTO KG.
E				ESCALA: 3:2	A3	DIBUJADO
D					FECHA	15/09/2016
C					POR	J.M.A.
B						
A						
IND	FECHA	POR	MODIFICACION			
	LA0001		CARABINA AZOR			
AIR RIFLE ASSEMBLY				2/3	L00001	

PROPIEDAD EXCLUSIVA DE LOBO AIRGUNS
PROHIBIDA SU REPRODUCCION

THE CONTENT OF THIS MANUAL, ASSEMBLY PLANS AND PARTS
LISTS ARE ALSO AVAILABLE FOR DOWNLOAD FROM OUR WEBSITE

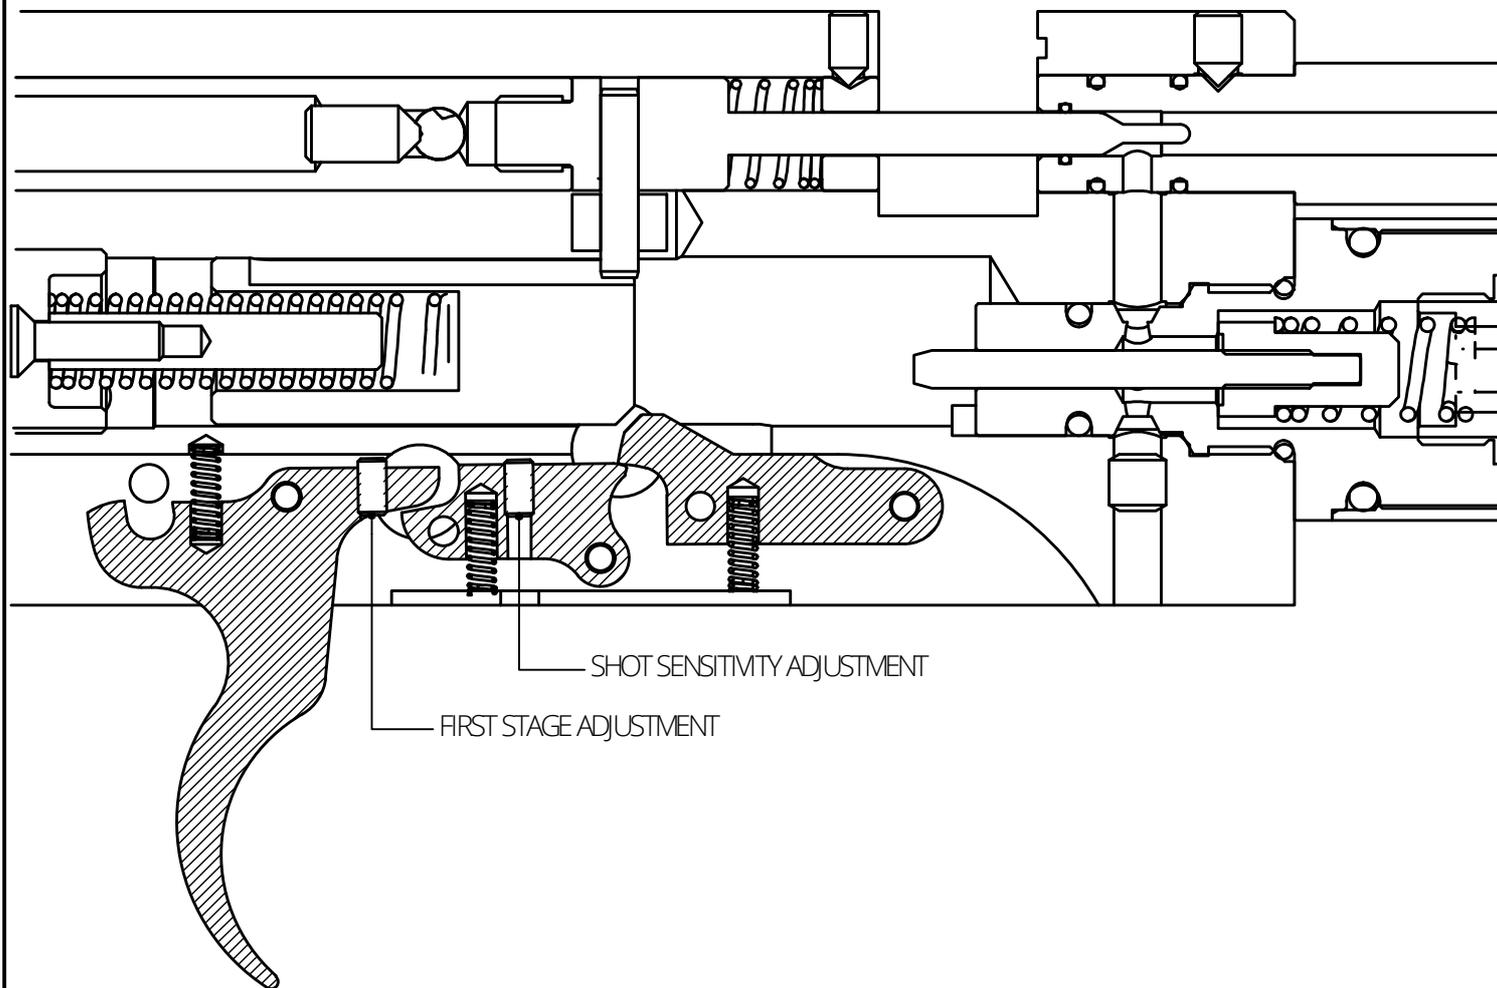

IMPORTANT NOTES

- LOBO AIRGUNS DELIVERS ALL CARABINES ADJUSTED
- IN ORDER TO PERFORM ANY KIND OF ADJUSTMENT OR MODIFICATION, THE STOCK HAS TO BE REMOVED.
- A WRONG ADJUSTMENT MAY CAUSE AN INVOLUNTARY SHOT
- USE AN ALLEN WRENCH (1.5mm)

PROPIEDAD EXCLUSIVA DE LOBO AIRGUNS PROHIBIDA SU REPRODUCCION	E				ESCALA:	A4	DIBUJADO	
	D					FECHA		
	C					POR		
	B							
	A							
IND	FECHA	POR	MODIFICACION		L00001 3/3			
TRIGGER ADJUSTMENT								



info@loboairguns.com www.Loboairguns.com

**Follow us on [Facebook.com/loboairguns](https://www.facebook.com/loboairguns)
And [Instagram.com/loboairguns](https://www.instagram.com/loboairguns)**